


# battery monitor


## BMV-602



### Included

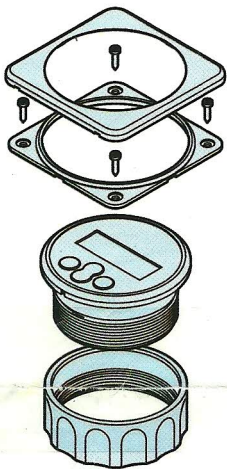

Battery monitor

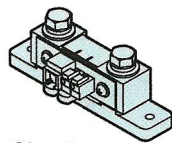

Shunt



UTP cable




Pos. supply cable (x2)


### WARNING

Please read this guide carefully to avoid wrong connections that cause battery monitor malfunction and/or fire hazards

Disconnect the negative pole of the battery before installation!

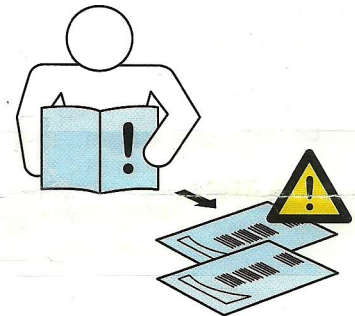

### Wiring diagram

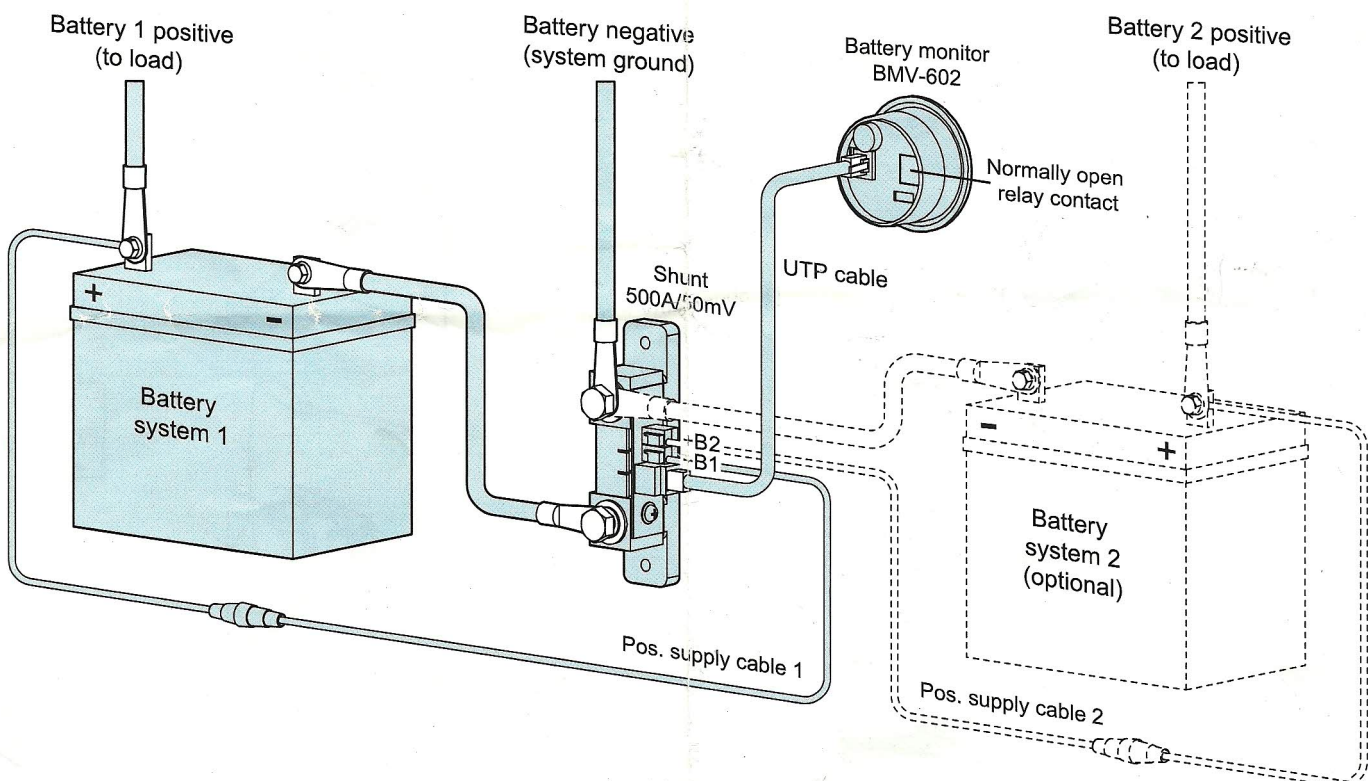

**Connect the negative pole of the battery last !**